

Instructions for changing retrieval direction:


Congratulations on your new fly reel.

This reel uses a one-way roller bearing, which allows the drag to be engaged only in one direction. Changing the retrieval direction simply requires changing the direction of this bearing.


Follow these simple steps:



1. Remove spool, using the spool release lever located in center of spool.

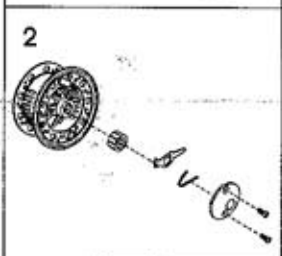

2. The roller bearing is located in the center of the spool, under the spool release cap. To remove the bearing, unscrew the two screws on the spool release cover.

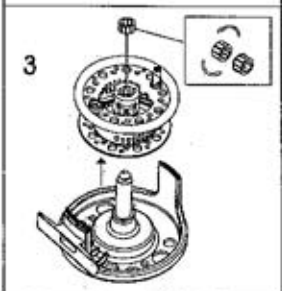

3. Turn the spool over and take the bearing out of the spool. You can push the bearing out of the spool seat by inserting the main shaft of this reel or a small screw driver or flat tool under the metal bearing cover. Please take care to not damage the bearing or to pull the plastic sleeve out of the metal bearing retainer.



4. Flip the direction of the bearing and reinsert it into the spool. Replace the spool release cap and secure with the two screws.